



6 & 7 Line

Rotary Clothesline

6 Line - 99157295, 99157301

7 Line - 99157318, 99157325



Contact

SOUDAL NZ LTD

134 Kohia Drive, Horotiu, 3288

Hamilton, New Zealand

Ph: 0800 70 10 80

Email: sales@soudal.co.nz

www.soudal.co.nz



Warranty

In addition to all rights and remedies to which you may be entitled under the New Zealand Consumer Guarantees Act (1993) and any other relevant legislation, Soudal NZ Limited warrants the product to be free from defects in materials or workmanship for 10 years from the date of purchase.

In the event of a claim, you must take the product with proof of purchase and an explanation of the fault to the place of purchase or contact Soudal NZ Limited and provide your proof of purchase. All costs associated with the return of the good (and other expenses incurred in claiming under this warranty) are your responsibility. We will, at our option, either repair or replace the product if it has a defect in its materials or workmanship.

Soudal NZ Limited liability under this warranty is subject to Soudal NZ Limited being satisfied that a defect was caused by defective workmanship or materials and was not caused by or substantially contributed to by other factors including (but not limited to) maintenance or repair, adjustments or modifications of the product in a manner not recommended by the manufacturers or any neglect, misuse or excessive use. For the avoidance of doubt, this warranty does not cover acts of God, earthquake, cyclone, fire, explosion, flood, landslide, lightning, storm, tempest, drought or meteor, war, terrorism, restraint or damage to property by or under the order of any government authority or industrial action.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For goods purchased within New Zealand, this warranty is provided by Soudal NZ Limited, 134 Kohia Drive, Horotiu, Hamilton. Phone 0800 70 10 80.

Introduction

Congratulations


Congratulations on the purchase of your Sun King Rotary Clothesline, which will bring you many years of trouble free and efficient drying. It's important that you read this Product Manual thoroughly before installation to benefit from the design features and enjoy safe use of this product. Thank you for choosing Sun King.

Warning

- Do not allow children or pets to swing on the clothesline or items of laundry.
- Ensure when raising and lowering your clothesline that bystanders (in particular children are standing well clear.
- Do not use for any purpose other than to hang and dry washing.
- Do not use your clothesline if parts are worn or damaged.
- Do not allow the frame to lower in an uncontrolled manner as damage or injury may result.

Package Contents

6 Line Rotary

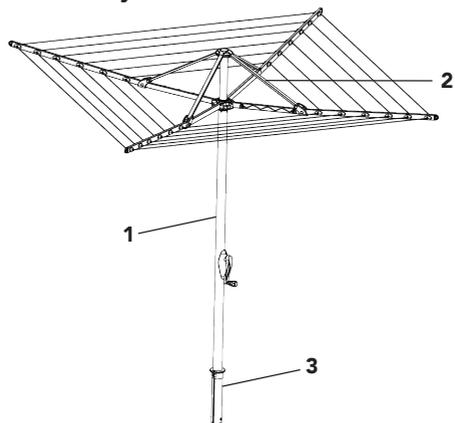

7 Line Rotary



Item	Part Name	Quantity
1	Main standard	1
2	Head assembly	1
3	Ground Socket with cover	1

Operation

Step 4 – Operating the Hoist

4.1 To adjust the height of your Rotary Hoist, wind the handle and head assembly down.

The suggested operating height is the user's head height +25mm. **(Fig. 4).**

Note: The height adjusting winding mechanism has an automatic device to disengage the handle at the maximum and minimum heights. A slight 'clicking' noise will be heard when this system is operating.


4.2 To open: Make sure the lines are tangle free. Push the lower cross and arms up until the latch engages.


4.3 To fold: Pull down on the latch with one hand, and use your opposite hand to guide one clothesline arm into position.

4.4 To remove your clothesline from the ground socket: Lift the clothesline upwards while rotating anti-clockwise.

4.5 To insert your clothesline back into the ground socket: Lower the clothesline into the ground socket and rotate clockwise until it drops into place.

Fig. 4

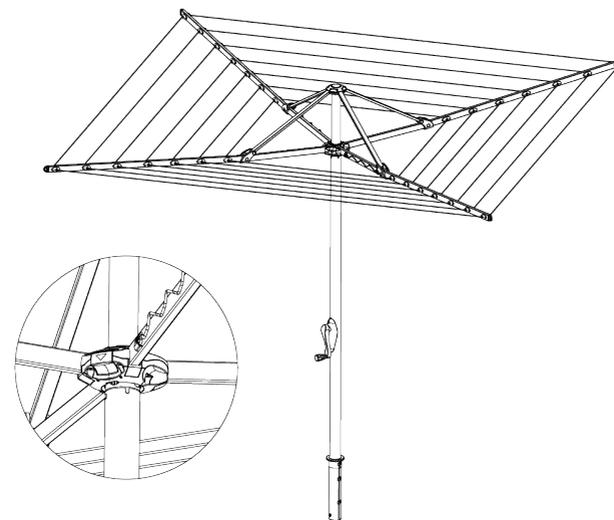

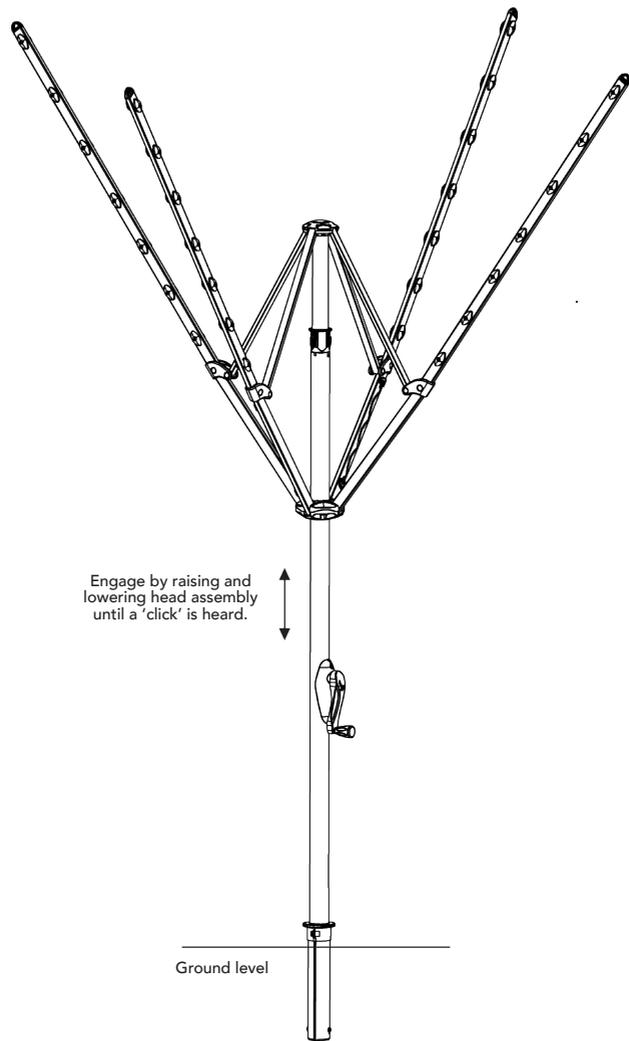


Installation

Step 1 – Select a suitable location

- 1.1 Select a suitable area for installation.
- 1.2 Allow a minimum of 500mm clearance around your Rotary Hoist. (**Fig. 1**).

Fig. 1

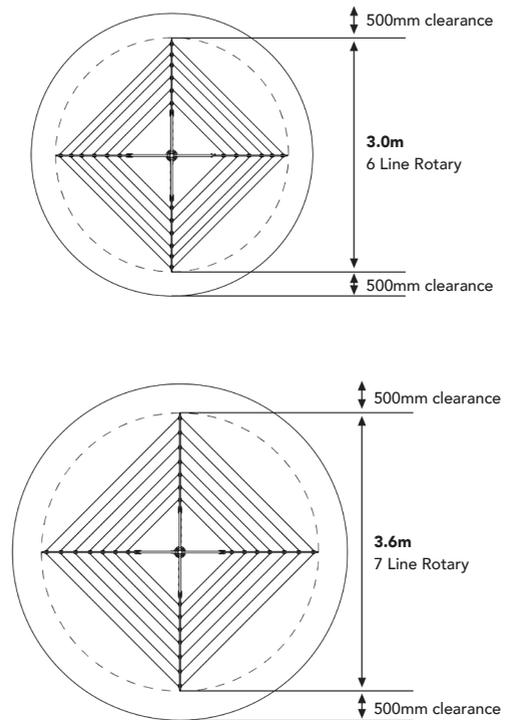


Step 2 – Install the Ground Socket

- 2.1 Dig a hole 650mm deep and 250mm in diameter. (Fig. 2).
- 2.2 Place approximately 200mm of coarse gravel into the hole.
- 2.3 Insert the main standard into the ground socket. Rotate the post in the ground socket until it locks.

- 2.4 Place the ground socket and main standard into the hole. Push the base of the ground socket into the gravel. Check level vertically. The top of the ground socket must sit approximately 6-12mm above ground level.
- 2.5 Support the main standard and concrete into position. Concrete should be damp enough to 'hold together' when squeezed in your hand. Settle concrete by pushing a thin stick into the mix several times. Leave the main standard in the ground socket until the concrete has set.
- 2.6 Allow 24 hours for the concrete to set before final assembly and use of your Rotary Hoist.

Fig. 2

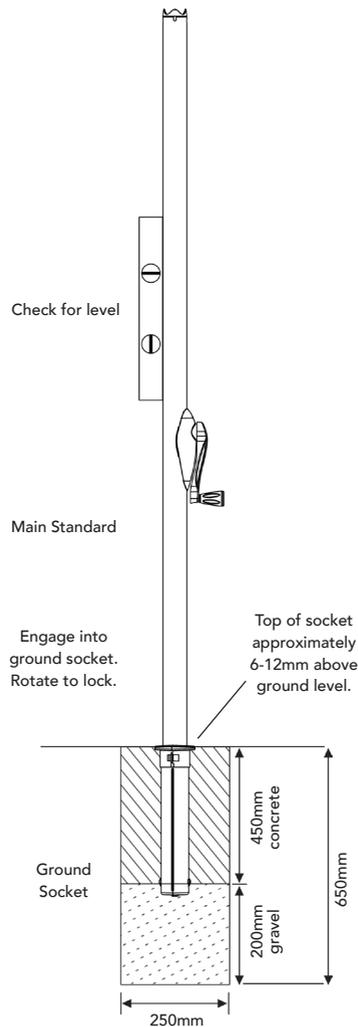

Assembly

Step 3 – Assemble the Hoist

- 3.1 Place the main standard in the ground socket.
- 3.2 Place the bottom of the head assembly into the top of the main standard and pull downwards until a 'click' is heard. (Fig.3)

Fig. 3

