


HOW TO COMPLY DIAGRAM

- Gorilla Wallboard Adhesive daubs at 300mm centres
- Single screws or nails to each stud where the horizontal joint crosses the studs.

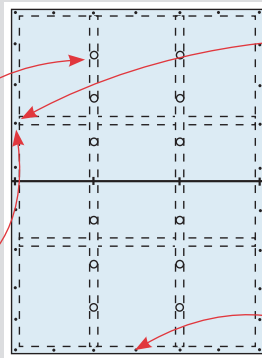

- Screws or nails at 300mm centres to top and bottom plates and to perimeter studs.
- 5-10mm gap between bottom edge of lower sheet and floor.
- Studs at 600mm maximum.



WHY GORILLA WALLBOARD ADHESIVE?

Gorilla Wallboard Adhesive eliminates all risks, has extremely high initial grab and it will not slide.

- **Guaranteed not to slide = Instant walls**
- **Guaranteed to have high initial grab**
- **Guaranteed not to shrink = No popping**

WHAT YOU NEED

| | |
|--------|---|
| #19317 | Gorilla Wallboard Construction Adhesive 600ml |
| #21116 | Gorilla FixAll PRO 600 Gun 290ml-600ml |

*Soudal Ltd warrants Gorilla Wallboard Adhesive to bond wallboard to timber and steel[†] framing and ceiling battens when used in conjunction with mechanical fasteners and installed to industry normal standards. Should any substantiated claim arise regarding Gorilla Wallboard Adhesive performance Soudal will replace or repair the affected area at their sole discretion. Conditions apply. See soudal.co.nz for more details.

[†] Test Prior

