

Soudal “PVC Wallboard Moulding’s”


This is a brief training providing some basic details on the range of PVC mouldings that we hold. Moulding types that we stock:

• External Corner	• 90 Degree Angle
• Internal Corner	• Reducing Dado
• Capping	• Scotia/Cornice
• Bath Flashing	• Stick-It-On Wallboard Moulding’s

All PVC Mouldings Sold ONLY in complete packets ie: 10 pieces

Fixing & Installing of Slimline Mouldings

- Measure and cut to length
- De-burr cut edges
- Fix and install as below

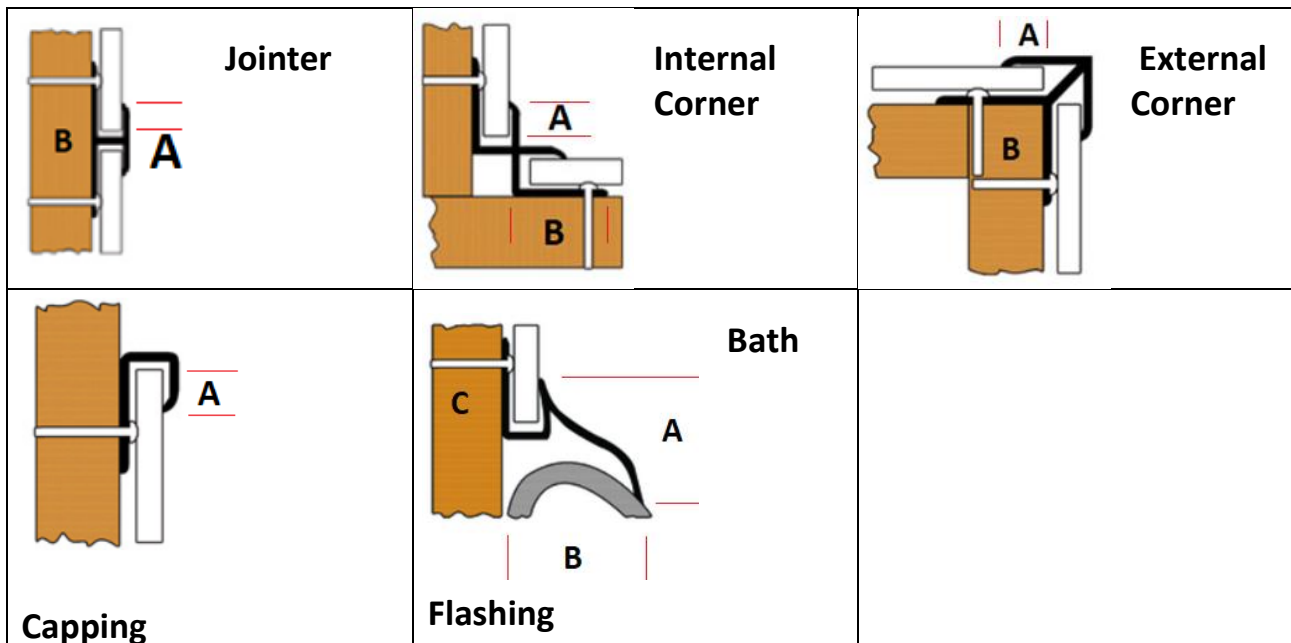

“PVC Wallboard Moulding’s”

Shrink Back

- UV Stabilized (you can add additional UV protection by use of acrylic paint coating)
- No “Lead” used in manufacture (does not turn brown in “Sulphurous” environments)
- Wide range of sizes/profiles
- Sold in 10 x Lengths per packet

Disadvantages


- Will “shrink back” when exposed to direct heat & UV over a period of time
- This is more prevalent when temperatures are above 35°C for extended periods



“PVC Wallboard Moulding’s”

What you may come across on site

- Due to the variety of wallboard linings in use today, the builder/installer cannot always get the exact size moulding to fit the board.
- To get around this:
 - Place a small bead of sealant in the moulding at the rear and insert the Wallboard Lining
 - Use the (46005) Mr Gorilla Xtra Tough Wipes to remove any residues of sealant.

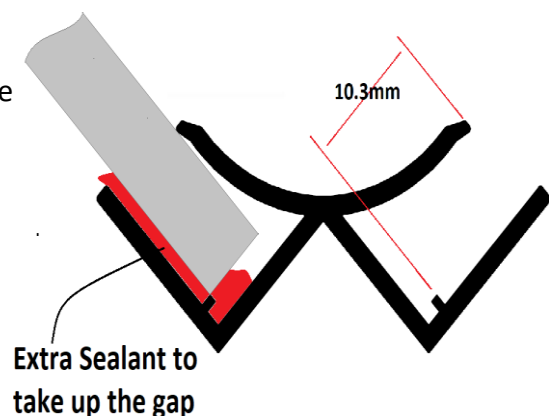

All PVC Mouldings Sold ONLY in complete packets ie: 10 pieces